


YONGNUO


YN360IV 使用说明书



(2).使用DC电源供电。

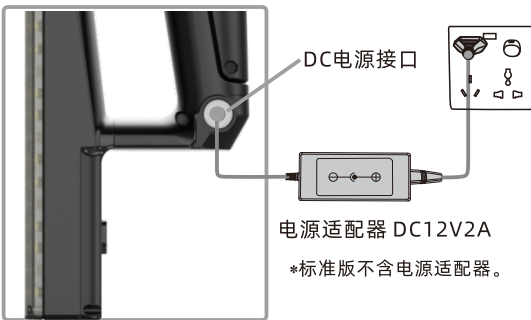


开机与关机

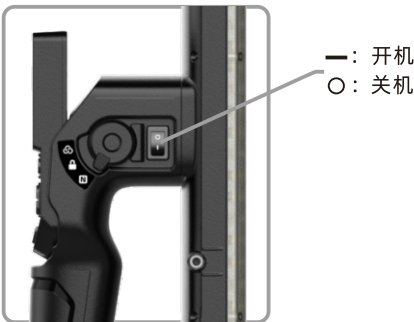


(4). 频道设置。

按下<M1>键进入菜单，选择<CH>频道，按下确认键，按<+>或<->键调节所需频道，按下确认键完成设置，再次按下<M1>键返回。

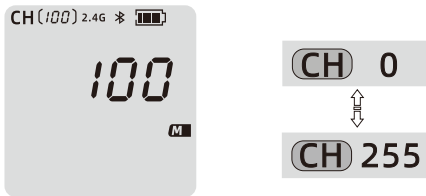

(5). 4种专业级调光曲线模型。

按下<M1>键进入菜单设置，按<+>键调至 4 闪烁，按下确认键停止闪烁，调节按键选择曲线模型。

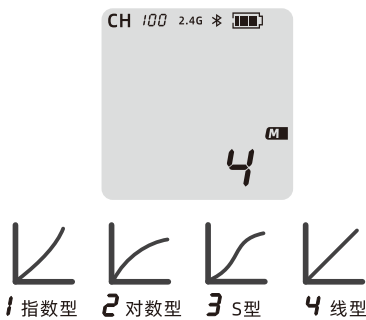

前言

感谢您使用YN360 IV摄像灯，在使用产品前，请认真阅读使用说明书。

注意事项

- 严禁将产品靠近或者投入火源，以避免发生火灾及爆炸等危险。
- 请勿私自拆卸产品，如产品出现故障须本公司或授权维修人员处理。
- 请勿在易燃易爆和暴露在雨中使用。

产品规格

光源	400颗灯珠+80颗贴片灯		
色温	2000K~10000K和RGB全彩		
输出功率	24瓦		
照度	距离	0.3米	0.5米
		1米	
	5600K	11710Lux	6494Lux
	R	2580Lux	1124Lux
	G	4361Lux	2140Lux
	B	1112Lux	534Lux
摄影灯重量	约800克		
外接电池	一个NP-F系列电池		
外接电源	DC12V2A、接口尺寸Φ5.5*2.1mm		
摄影灯尺寸	57*6*9.5厘米	包装尺寸	165*15*11厘米
遥控距离	≤15米	2.4G遥控控制	≤15米
平均寿命	50000小时	遥控器电池	CR2032/3V
光照角度	55°和110°		
所含物品：	摄像灯（1）、遥控器（1）、收纳包（1）、说明书（1）。		
注：	如有缺失请与经销商联系。		

产品结构



遥控器结构



反光板结构




安装遥控器

首次使用需拉出遥控器电池绝缘垫片。
安装：按箭头方向安装遥控器，无操作一分钟自动息屏。
卸下：按住遥控器锁扣朝箭头反向取下，无操作十五秒自动息屏。



多种供电方式

(1).使用电池供电。
安装：按箭头方向安装NP-F系列电池。
卸下：按住电池锁扣，朝箭头反向取下电池。

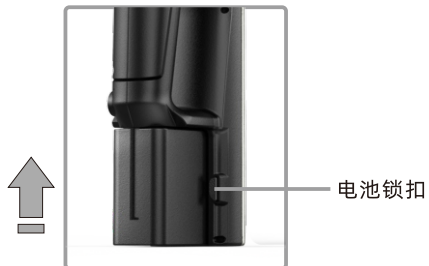


*标准版不含NP-F系列电池。

1、标准模式

(1). 色温设置。



(2). 色调设置。

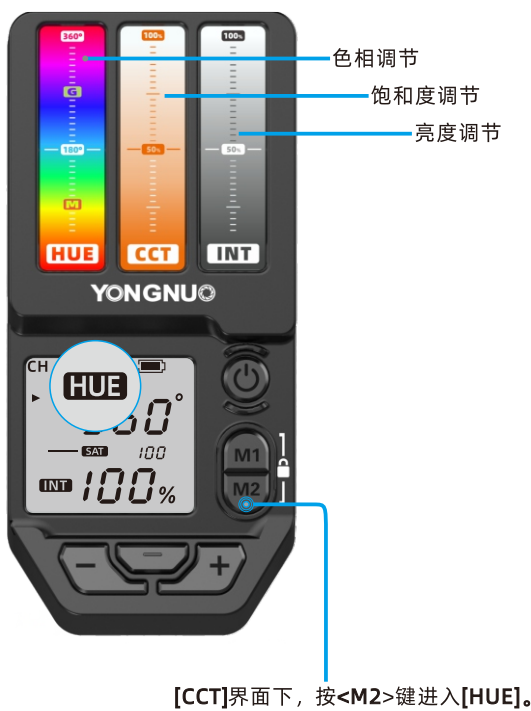


(3). 特效设置。




2、灯光锁定模式

开启灯光锁定模式，遥控器、APP同时锁定不可操作。

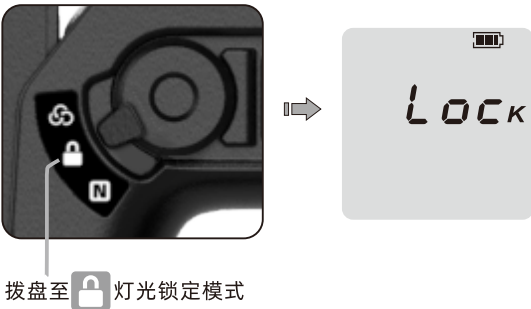

3、多灯编排模式

使用编排模式请下载APP操作。

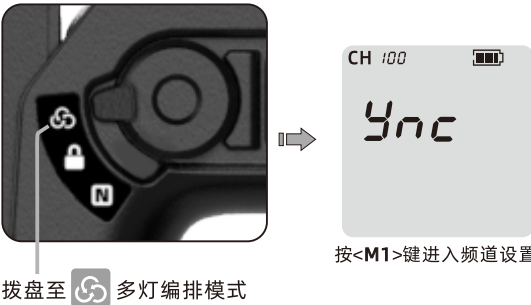

4.APP与遥控的使用

- (1).按下<M1>键进入菜单设置，选择蓝牙<➡>，按下确认键开启或关闭蓝牙,此时打开APP自动连接。
- (2).2.4G无线模式可选择开启或关闭。
- (3).访问永诺官网或扫描说明书中的APP二维码下载。



本手册中的功能是依据本公司的测试条件获得，设计和规格如有变更，恕不另行通知。
深圳市永诺摄影器材股份有限公司
地址：深圳市坪山区坑梓街道深福保现代光学厂区A座
电话：（86）0755-83762448
传真：（86）0755-83762765
网址：www.hkyongnuo.com
生产地址：深圳市坪山新区坑梓街道锦绣中路14号
深福保现代光学厂区A栋厂房
售后电话：400-001-3888

YN360IV

User Manual



Introduction

Thank you for using YN360IV. Please read the user manual carefully before use,thank you.

Precautions

- Do not put the product close to or throw it into the fire source to avoid the danger of fire and explosion.
- Do not disassemble the product,maintenance or repair of this product should be handled by technical maintenance personal of our company or authorized technical maintenance personal.
- When the product is running, please do not look directly at the COB lamp beads, do not cover the heat emission hole,and do not touch the COB lamp beads;When the device is running, do not look directly at the light.
- Do not use this product in flammable and explosive place,or where it can be exposed to moisture.


Product specification

Light Source	400pcs lamp beads + 80pcs SMD lamp beads		
Color temperature version	2000K~10000K and full color RGB		
Output power	24W		
Distance	0.3M	0.5M	1M
5600K	11710Lux	6494Lux	2295Lux
R	2580Lux	1124Lux	355Lux
G	4361Lux	2140Lux	655Lux
B	1112Lux	534Lux	169Lux
Product Net Weight	Approx800g		
Compatible batteries	One NP-F series batteries (Need to be purchased separately.)		
External power source	DC12V2A、Interface size Φ5.5*2.1mm 		
Product Net Size	57*6*9.5CM	Package Dimensions	65*15*11CM
Control distance	≤15M	2.4G wireless control	≤15M
Average Service Life	50000H	Remote Control Battery	CR2032/3V
Luminance Angle	55°and110°		
Contents:Video ligh(1),Remote Control(1), Storage bag(1), User Manua(1).			
Note:Please contact your dealer if anything missing.			

Product structure



Remote Control Structure

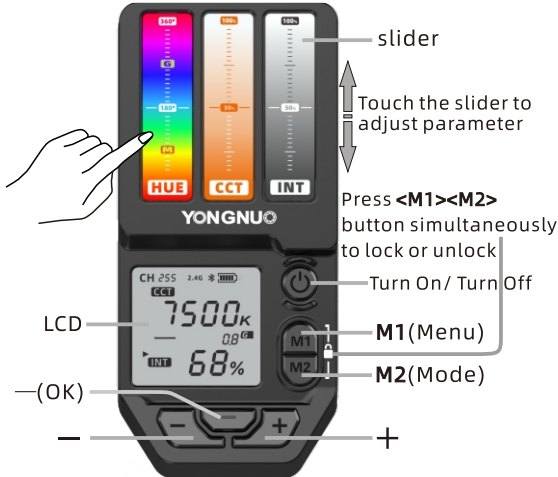


Reflector Structure

- 1、Reflector Installment. (Optional Reflector)
Use M4 screw to screw into the upper and lower ends of nut interfaces to install the reflector.



Remote Control Installment


Please pull out the battery insulation gasket of the remote control for the first use.
Installment: Follow the arrow direction to install the remote control. The screen will be automatically turned off after 1 min no-operation.
Removal: Press and hold the remote control lock buckle to remove it in the opposite direction of the arrow.The screen will be automatically turned off after 15s no-operation.

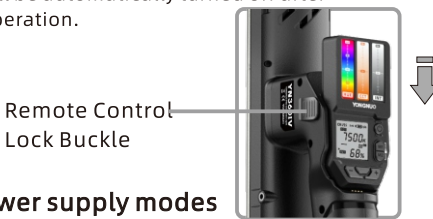

Two power supply modes


- (1) Uses battery for power supply.

Installment: Follow the arrow direction to install the NP-F series battery.
Removal: Press the battery lock buckle to remove the battery in the opposite direction of the arrow.

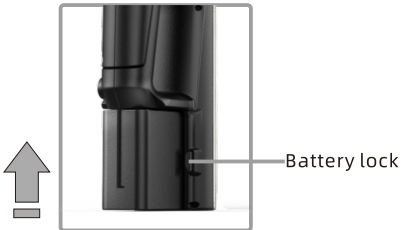


*The standard version does not contain NP-F series batteries.

- (2) .Powered by power adapter.

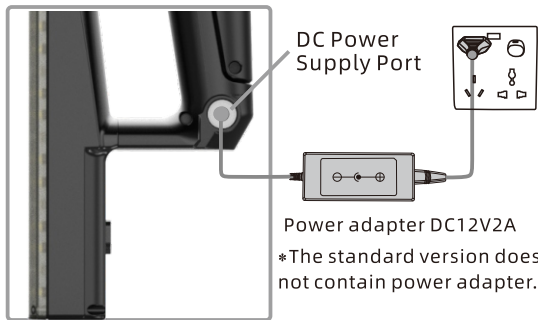


Power ON or OFF

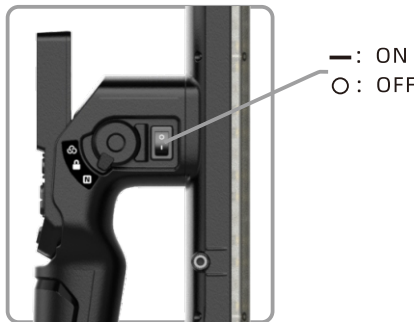


1、Standard Mode

- (1). Color Temperature Setting.

Toggle the dial plate to standard mode

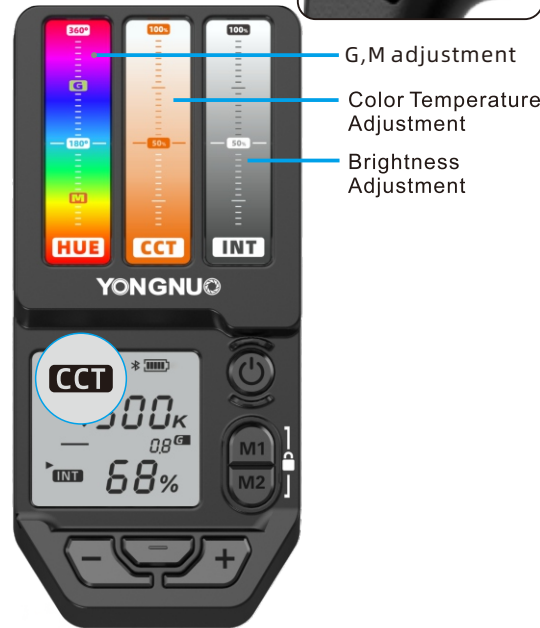


- (2). Tone Setting.

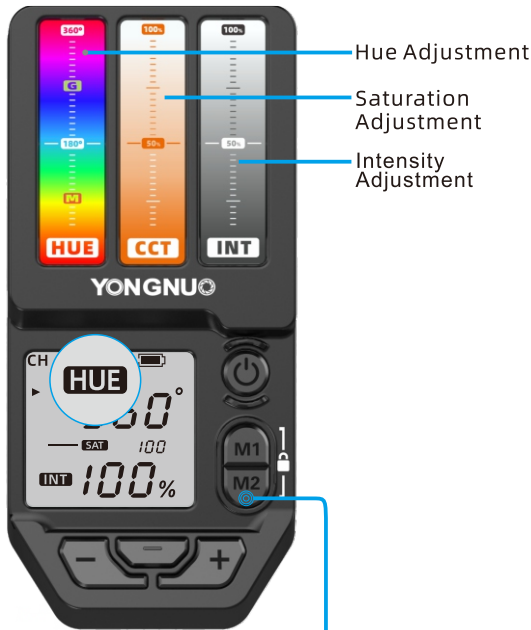

In [CCT] interface,press <M2> to enter [HUE].

- (3). Effects Setting.

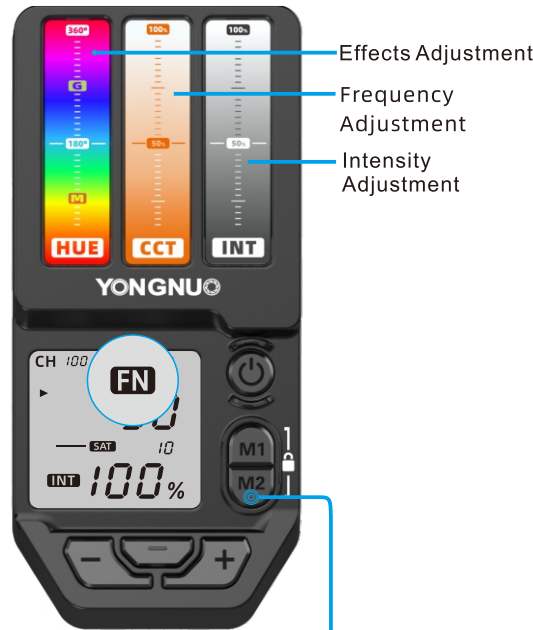


In [HUE]the interface,press <M2> to enter [FN]; press <M2> again to return to [CCT].




- (4).Channel Setting.

Press <M1> to enter menu, choose <CH> channel, press <OK>, adjust channel, press <OK> to finish setting, press <M1> again to return.

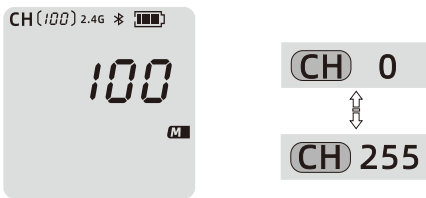


- (5).4 professional light adjustment curve models.

Press <M1> to enter menu, press <+> and adjust until [M] twinkles, press "OK" to stop twinkling, adjust the key to choose the curve mode.

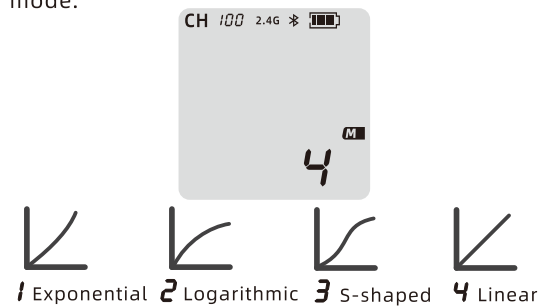


2、Light Lock Mode

Turn on light lock mode,the remote control and APP are locked simultaneously and non-operational.

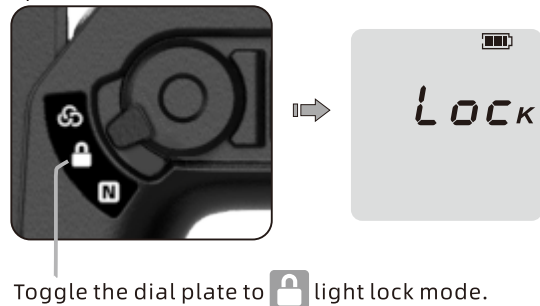


3、Multiple Lights Layout Mode

Please download APP for using layout mode.

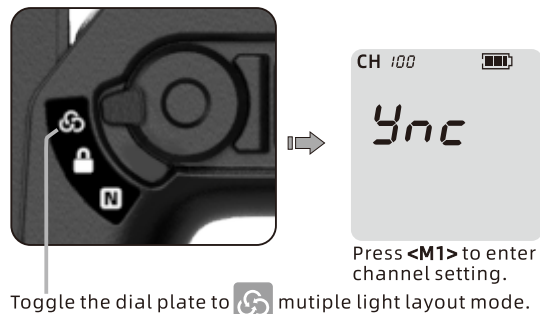

4.The Use of APP and Remote Control

- (1) Press <M1> to enter menu, choose bluetooth , press <OK> to turn or off the bluetooth. then open the APP to connect automatically.
(2) .2.4G wireless mode can be turned on or off.
(3) .Visit YONGNUO official website or scan the APP QR code in the manual to download.

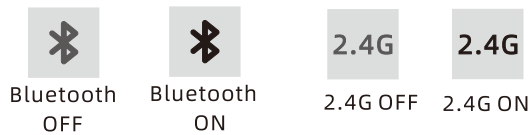

The functions in this manual are based on the test conditions our company.Further notice will not be given if the design and specifications change.

